

TECHNICAL PROCEDURE

#PTPA-0001

Replacement of a steel door sweep



1 - Remove the existing door sweep.

Open the door. Using a flat head screw driver separate the door sweep from the door by inserting the end of the screwdriver in the space between the bottom of the door and the door sweep. Remove the door sweep by hand by pulling downwards.



2 - Installation of a new door sweep

Orientation of the door sweep:

Interior: Rigid PVC wall with closed flexible bubble.

Exterior: Punched extremities with flexible lamellas.



Insert door sweep by pivoting the "U" shaped sweep. When installing the door sweep, make sure the door sweep is solidly inserted and is equal to the door at both ends.