


## STEEL DOOR INSTALLATION GUIDE

### Exterior Door



First, anchor the door jamb of the butt hinges, and then the door jamb on the opposite side. By doing it this way, the butt hinges will be firmly attached to the post, and you will not have to dismantle the door.

The door frame opposite the butt hinges are not subject to the same amount of pressure, and therefore do not have to be firmly attached.

The shims used must be well adjusted inside the space without deforming the door frame. If not, they could distort the doorframe when anchoring.

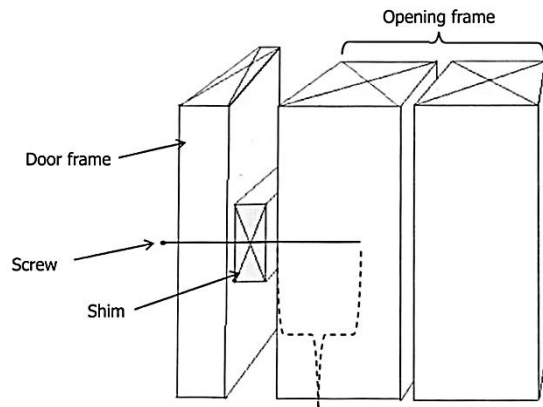

Door: One screw per butt hinge must penetrate the post at least 25 mm (1½ inches). The use of no. 10 screws is recommended.

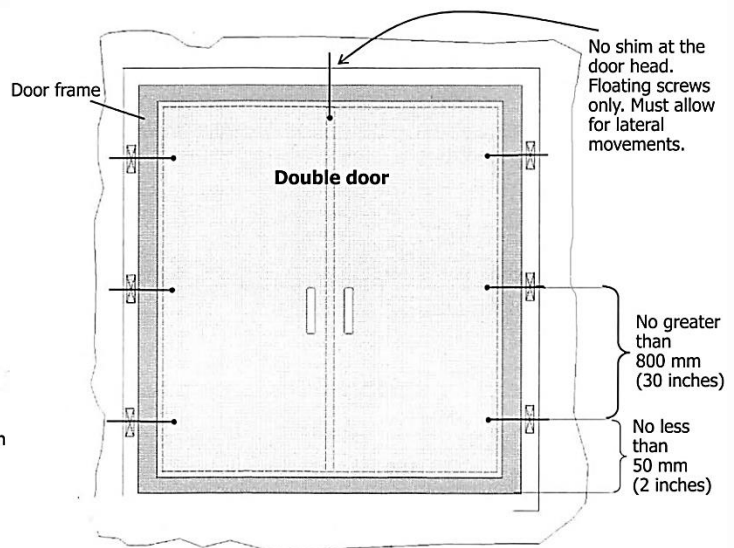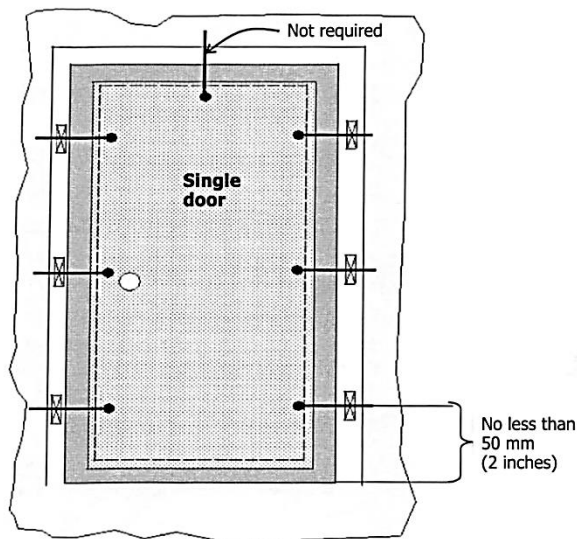

**Source :** APCHQ (2003), « Portes extérieures », *L'abc ... de la pose de portes et fenêtres dans le secteur résidentiel*, 1<sup>re</sup> édition, p. 86-87